

SEACHROME™


Seachrome Corporation
344 West 157th Street
Gardena, California 90248
Phone: (800) 955-2476
Fax: (800) 444-3380

IMPORTANT: PROPER BACKING MATERIAL AND MOUNTING HARDWARE MUST BE USED TO MOUNT THIS SHOWER SEAT FOR SAFE USE AND AS REQUIRED BY A.D.A. GUIDELINES.

Your Seachrome Shower Seat should be installed as an assembled unit and comes with an “easy-mount” template to make installation quick, easy and efficient.

1. Determine the width of the seat. The template provided is for a 23-1/2” wide seat.
2. ADA regulations specify a finished seat height 17” to 19” above the finished floor and 1-1/2” of clearance between the seat edge and the side wall.
3. Make sure that the Seat Width edge line is at the desired distance from the side wall and is straight and plumb.
4. Using the appropriate size drill bit for your fastener hardware, drill the three mounting holes for each of the right and left hinge bracket flanges and the three mounting holes for the sliding leg bracket at the positions designated on the template.
5. Holding the seat assembly in an upright and raised position against the wall, tightly secure the two hinge bracket flanges to the wall AND INTO PROPER BACKING MATERIAL, using mounting hardware suitable for your specific mounting application.
6. Slip the lower horizontal portion of the leg tubing into the sliding leg bracket and tightly secure bracket to the wall AND INTO PROPER BACKING MATERIAL, using mounting hardware suitable for your specific mounting application.
Note: A special flat-head screw has been provided for use in the bottom hole of the sliding leg bracket.
7. Check Seat for:
 - 1) Proper up and down operation.
 - 2) Correct finished height.
 - 3) Correct distance from wall.
 - 4) Weight bearing.

THIS COMPLETES INSTALLATION OF THE SHOWER SEAT.

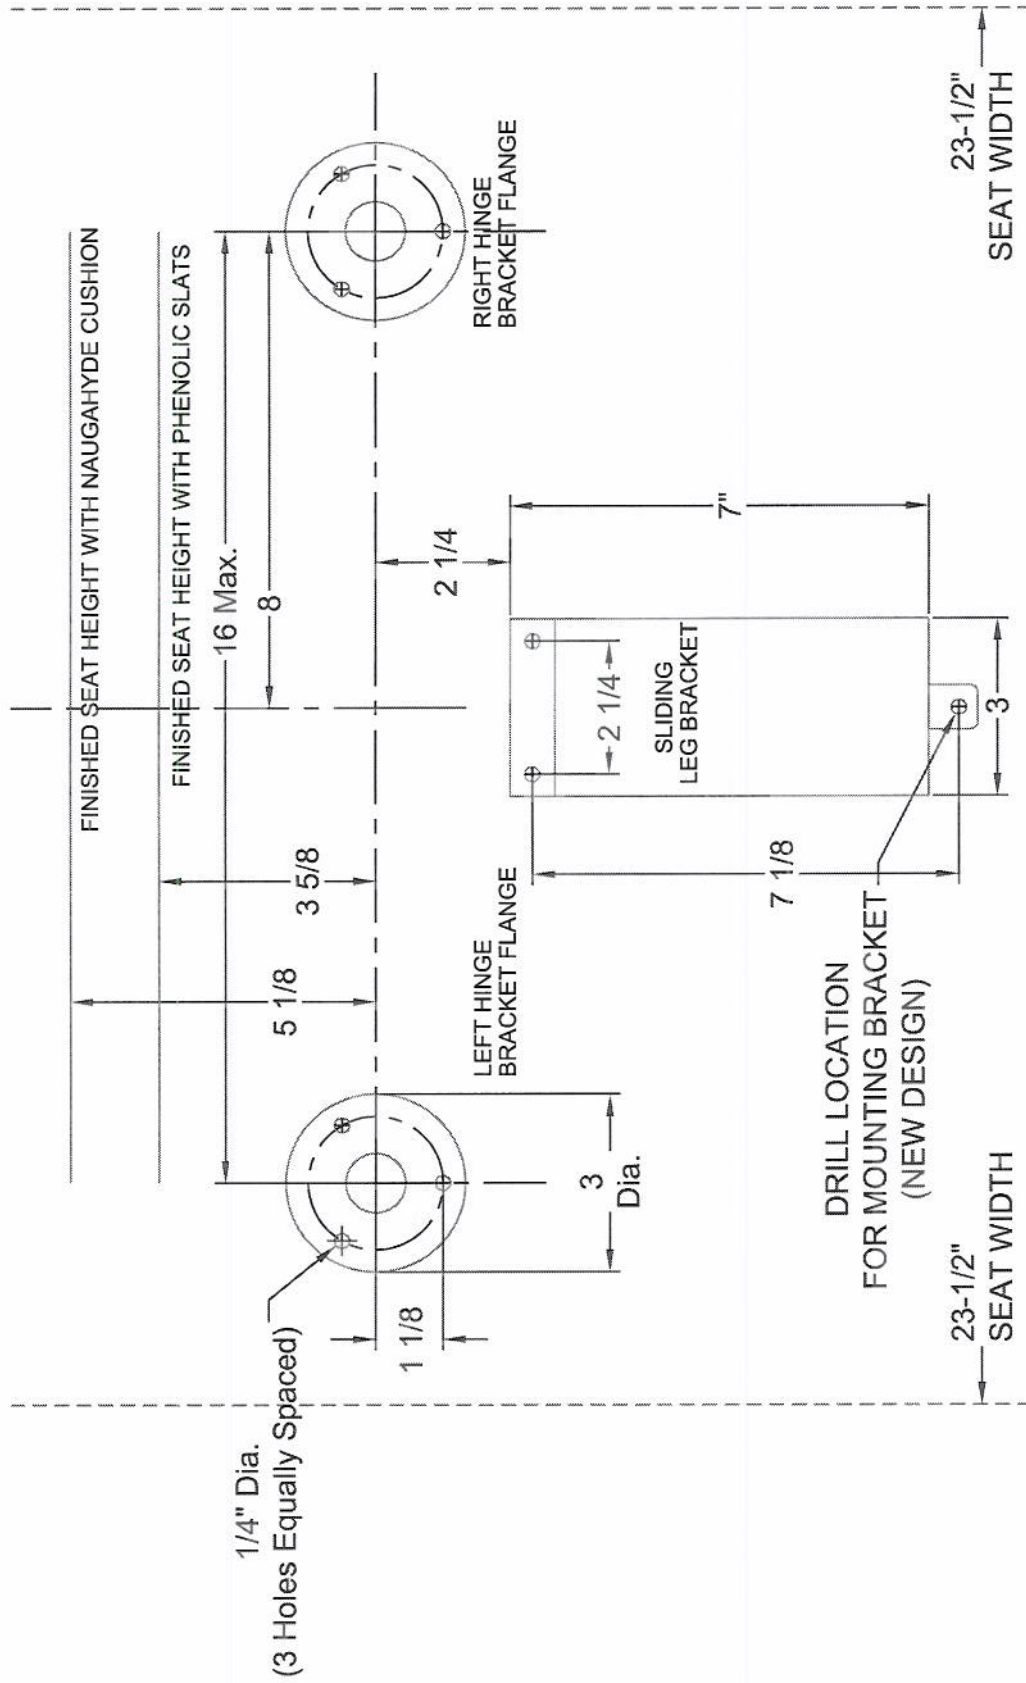

SEACHROME
 SEACHROME CORPORATION
 344 West 157th Street
 Gardena, California 90248

SWANSTONE
 SSL & SSR MOUNTING TEMPLATE
 25-1/2" SHOWER SEAT
 DATE: 07/15/2008